



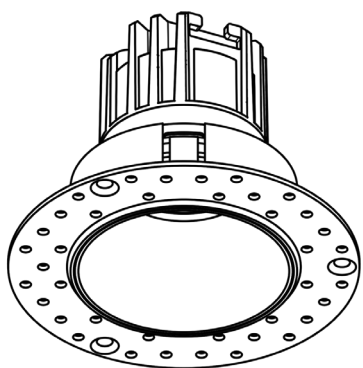

1.0 - PRODUCT INFORMATION

Downlight with a DEEP reflector that draws the light source further up, creating a very discreet fixture profile when viewed from below. Perfect for hotel rooms, restaurants and spaces where the light, not the fixture, should be in focus. Available with interchangeable 15°, 30°, and 50° optics, and in six material finishes.

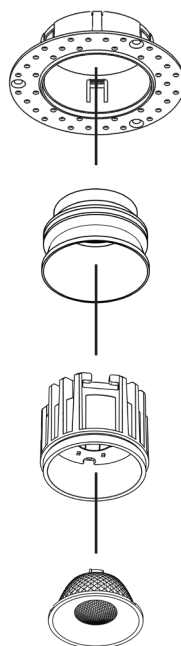

50 - TRIMLESS KIT - GIPS


DEEP_RE - (W / B / BR / NI / GM / PBR)

K50 - LED MODULE - 2.7K


50 - LENS - (15° / 30° / 50°)

2.0 - INSTALLATION TRIMLESS GYPSUM (PLASTER KIT)


2.1 - Make sure the power is disconnected. Run the cable to the planned location in an approved down-light box (min. 100 mm box).




2.2 - Use the EVNA special hole saw (art. nr. 38611) and cut out Ø73 mm / Ø100 mm in the ceiling for the installation of the trimless kit.

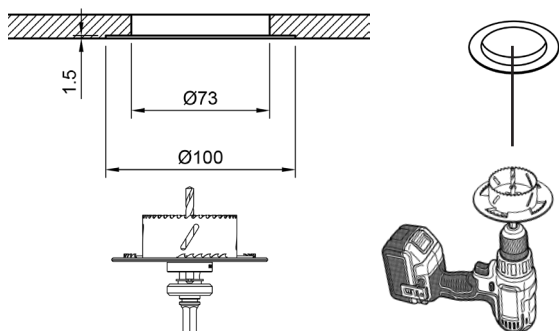


2.3 - Mount the trimless kit inside cutout hole using 3x suitable fasteners and a screwdriver / drill - and/or suitable construction adhesive / glue.

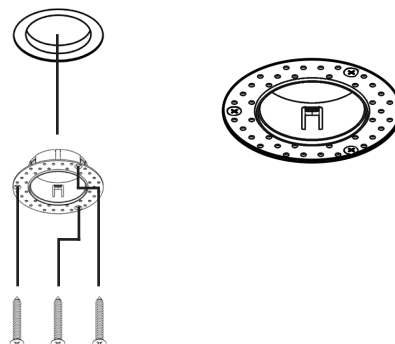

2.4 - Insert the cover into the installed trimless kit.

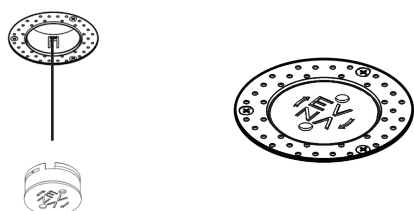


2.5 - Cut out and apply fiberglass mesh tape to cover the seams and proceed by applying spackle mass over the entire working area. After the spackle has dried, proceed by sanding it down to an even finish. The “trimless kit cover” should now be clearly visible. The ceiling surface is now ready for paint / final surface finish.

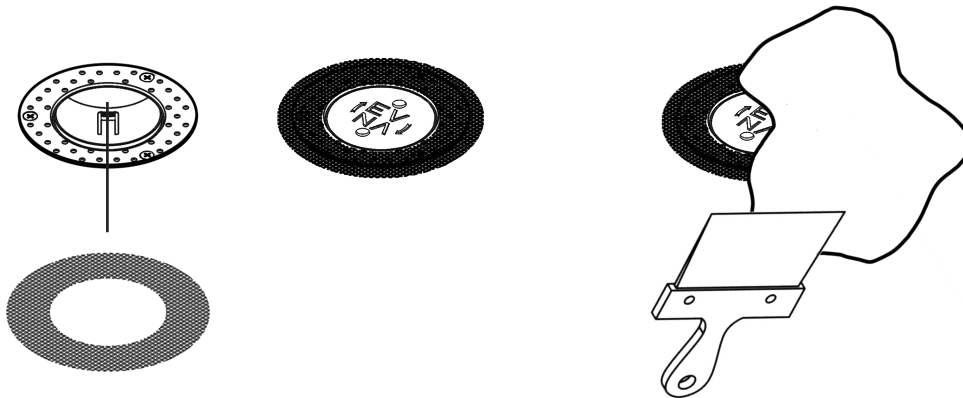


VIDEO INSTALLATION GUIDE





2.6 - Insert the “trimless kit cover key” into the cover and twist back and fourth until it loosens. Use the key to pull the cover out of the trimless kit. Any spackle-chipping can be removed by using a finger-nail or something similar (plastic or wood).

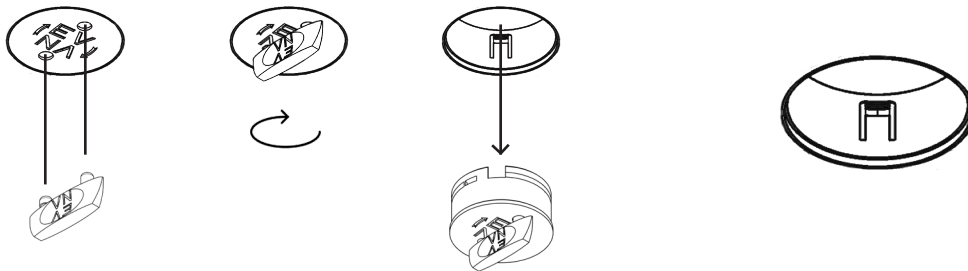

2.7 - Connect the power cables (L + N) to the primary input of the driver (junction box) and the K50 LED module to the secondary out on the driver (RED+ & BLACK -). Install the module by pushing the module into the trimless kit. The edge of the reflector should now flush with the ceiling surface.

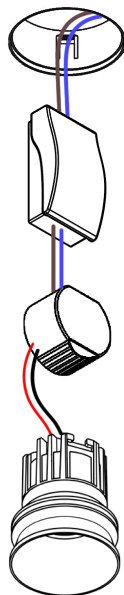

2.5 - Make sure everything is securely connected, turn the power on and test that everything works as intended.

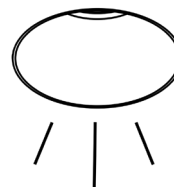

!!! NOTE: For indoor ceiling installation only (IP20). The product must not be installed in wet rooms without additional enclosure/gasket. An electrician is required to install this product. This product requires a downlight box (min. 100mm for gypsum and 48mm for MONO) and a minimum installation height of 75 mm.

